



THREETOEDBEAR


CUSTOMIZE YOUR LIFE

Cribbage Board Digital Download

Brought to you by the Three Toed Bear



THREETOEDBEAR
CUSTOMIZE YOUR LIFE

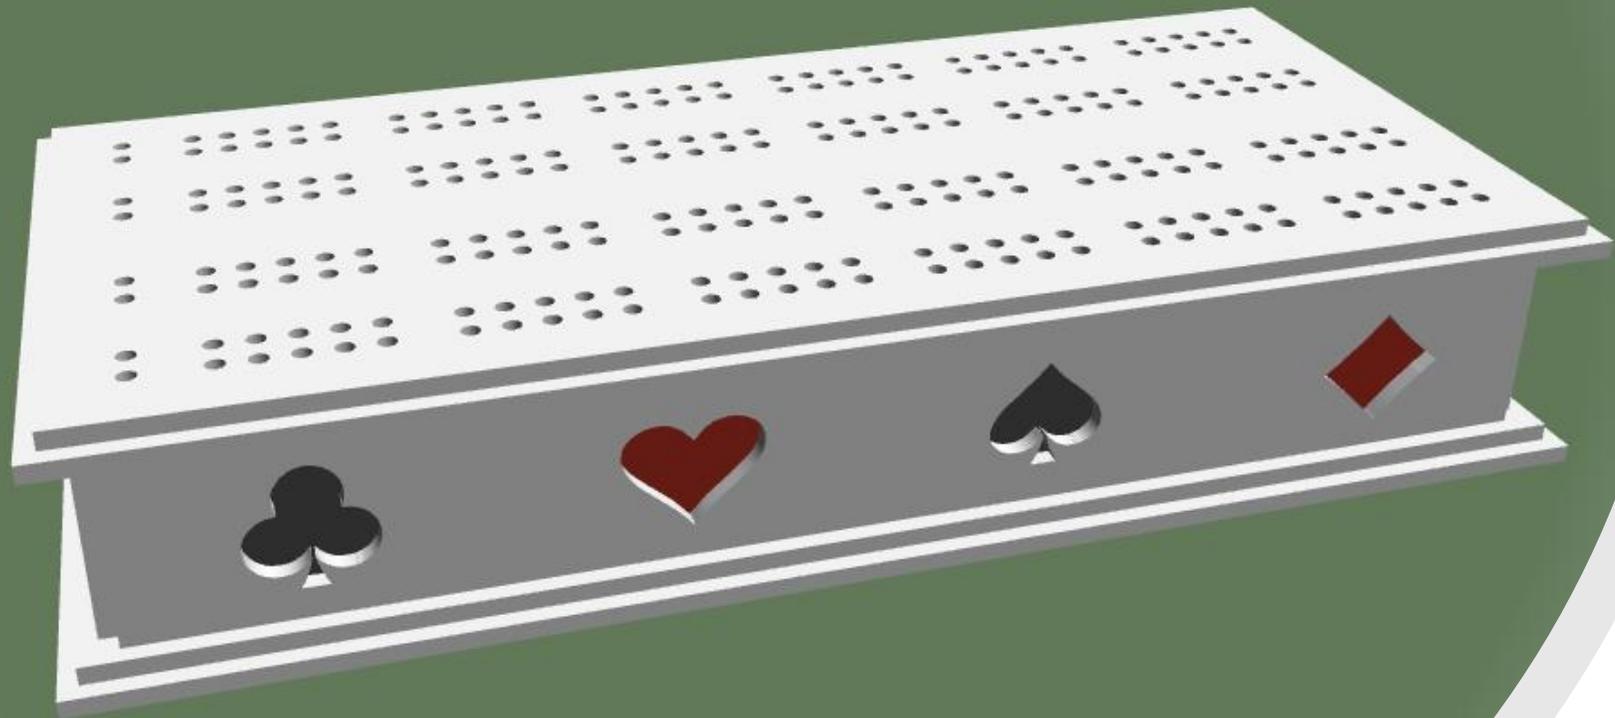

Thank you so much for your purchase and your interest in my designs. If you get the chance, pop on over to www.threetoedbear.com where there are lots of free downloads and some discount links for some others. Be sure to subscribe to the mailing list and be the first notified of new free designs, or when popular designs end up going online for free as a thank you to my customers!


You can also get notified of all the free files available on Facebook in the Glowforge Creators group at <https://www.facebook.com/groups/303245694844372>


And of course check me out on Instagram @threetoedbear
<https://www.instagram.com/threetoedbear/>

Please test the notch and groove fits before cutting the entire assembly. Not all lasers or materials are created the same, so getting a kerf-fit that works for everyone is impossible. This will work the material I recommend on www.threetoedbear.com

If the fits don't work for you, please feel free to shoot me an email at threetoedbear@gmail.com and we can work together to get you an assembly with the proper fits.

Glue the Upper Bottom Plate to the Bottom Plate. It should be centered with the Bottom plate. The Bottom should extend beyond the edge of the Upper Bottom Plate by distance equal to your material thickness.

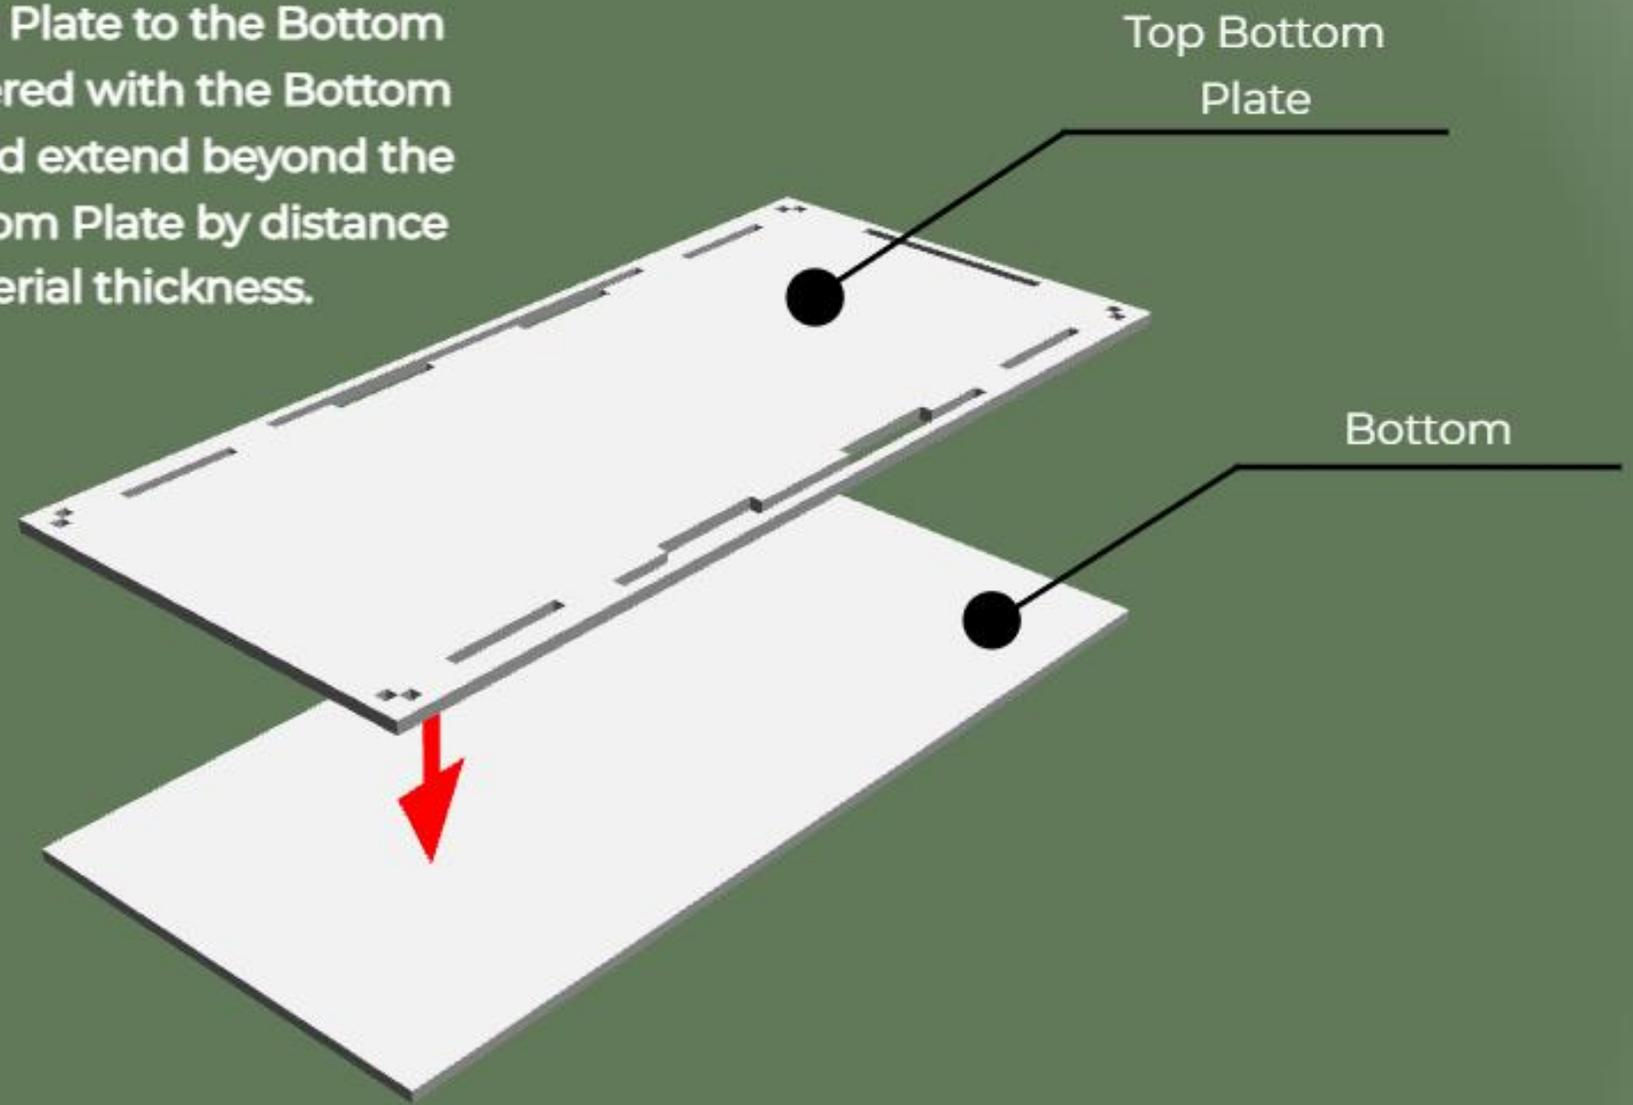


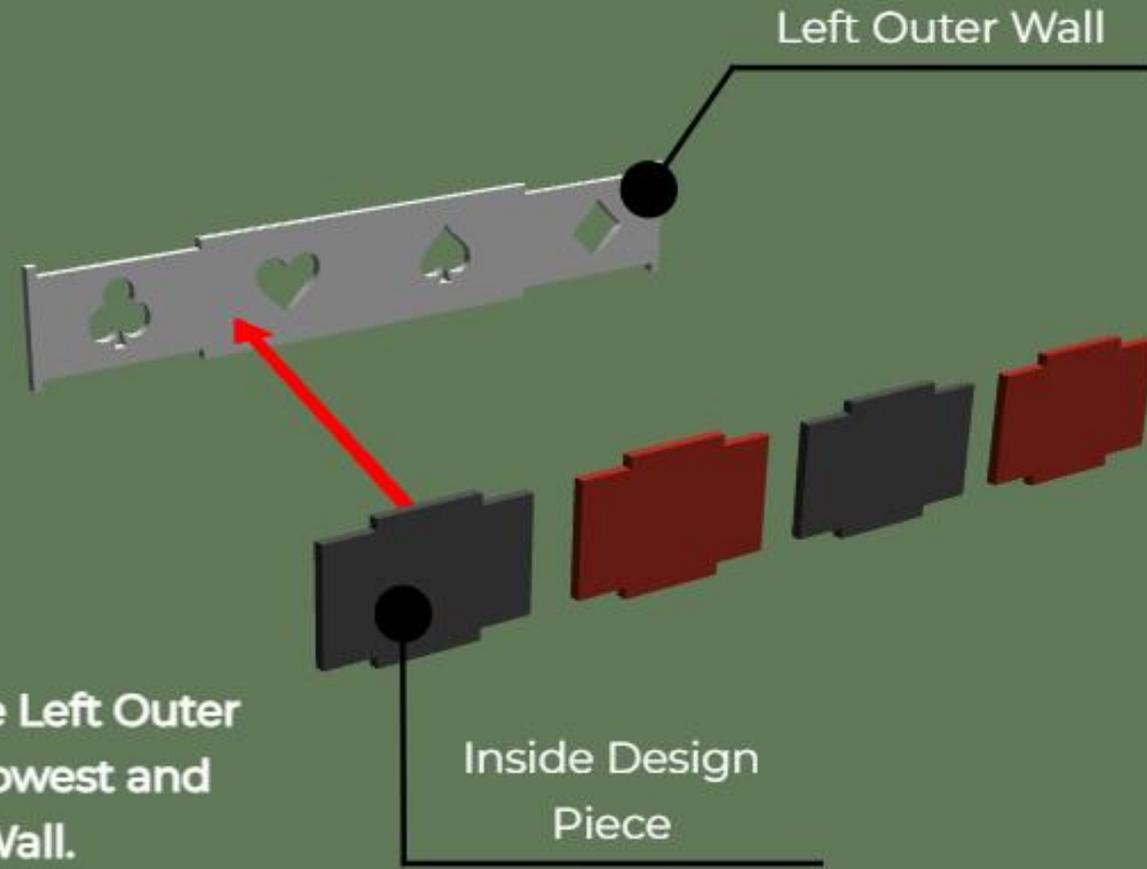

Glue the Inside Design Piece to the Left Outer Wall. They should align with the lowest and highest parts of the Outer Wall.


Repeat for the Left Outer Wall.

*If your using color, make sure you put the right color on the right symbol.

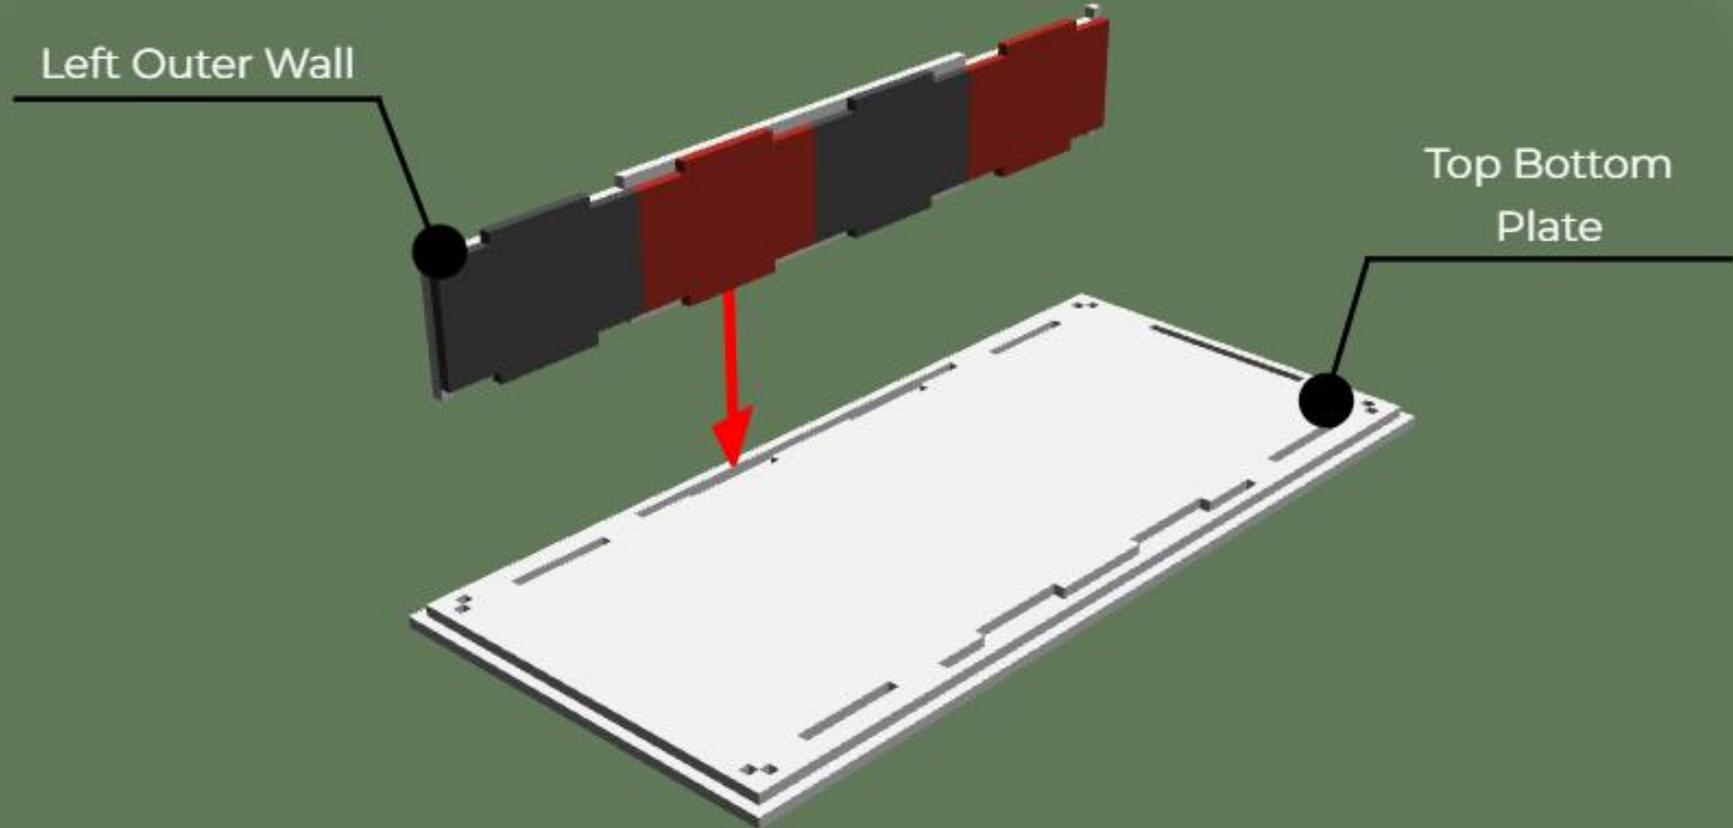

Insert the notches on the Left Outer Wall Assembly to the grooves on Top Bottom Plate. Glue both sides of all contacting faces.


Insert the notches on the Back to the grooves on the Upper Bottom Plate. Glue both sides of all contacting surfaces.

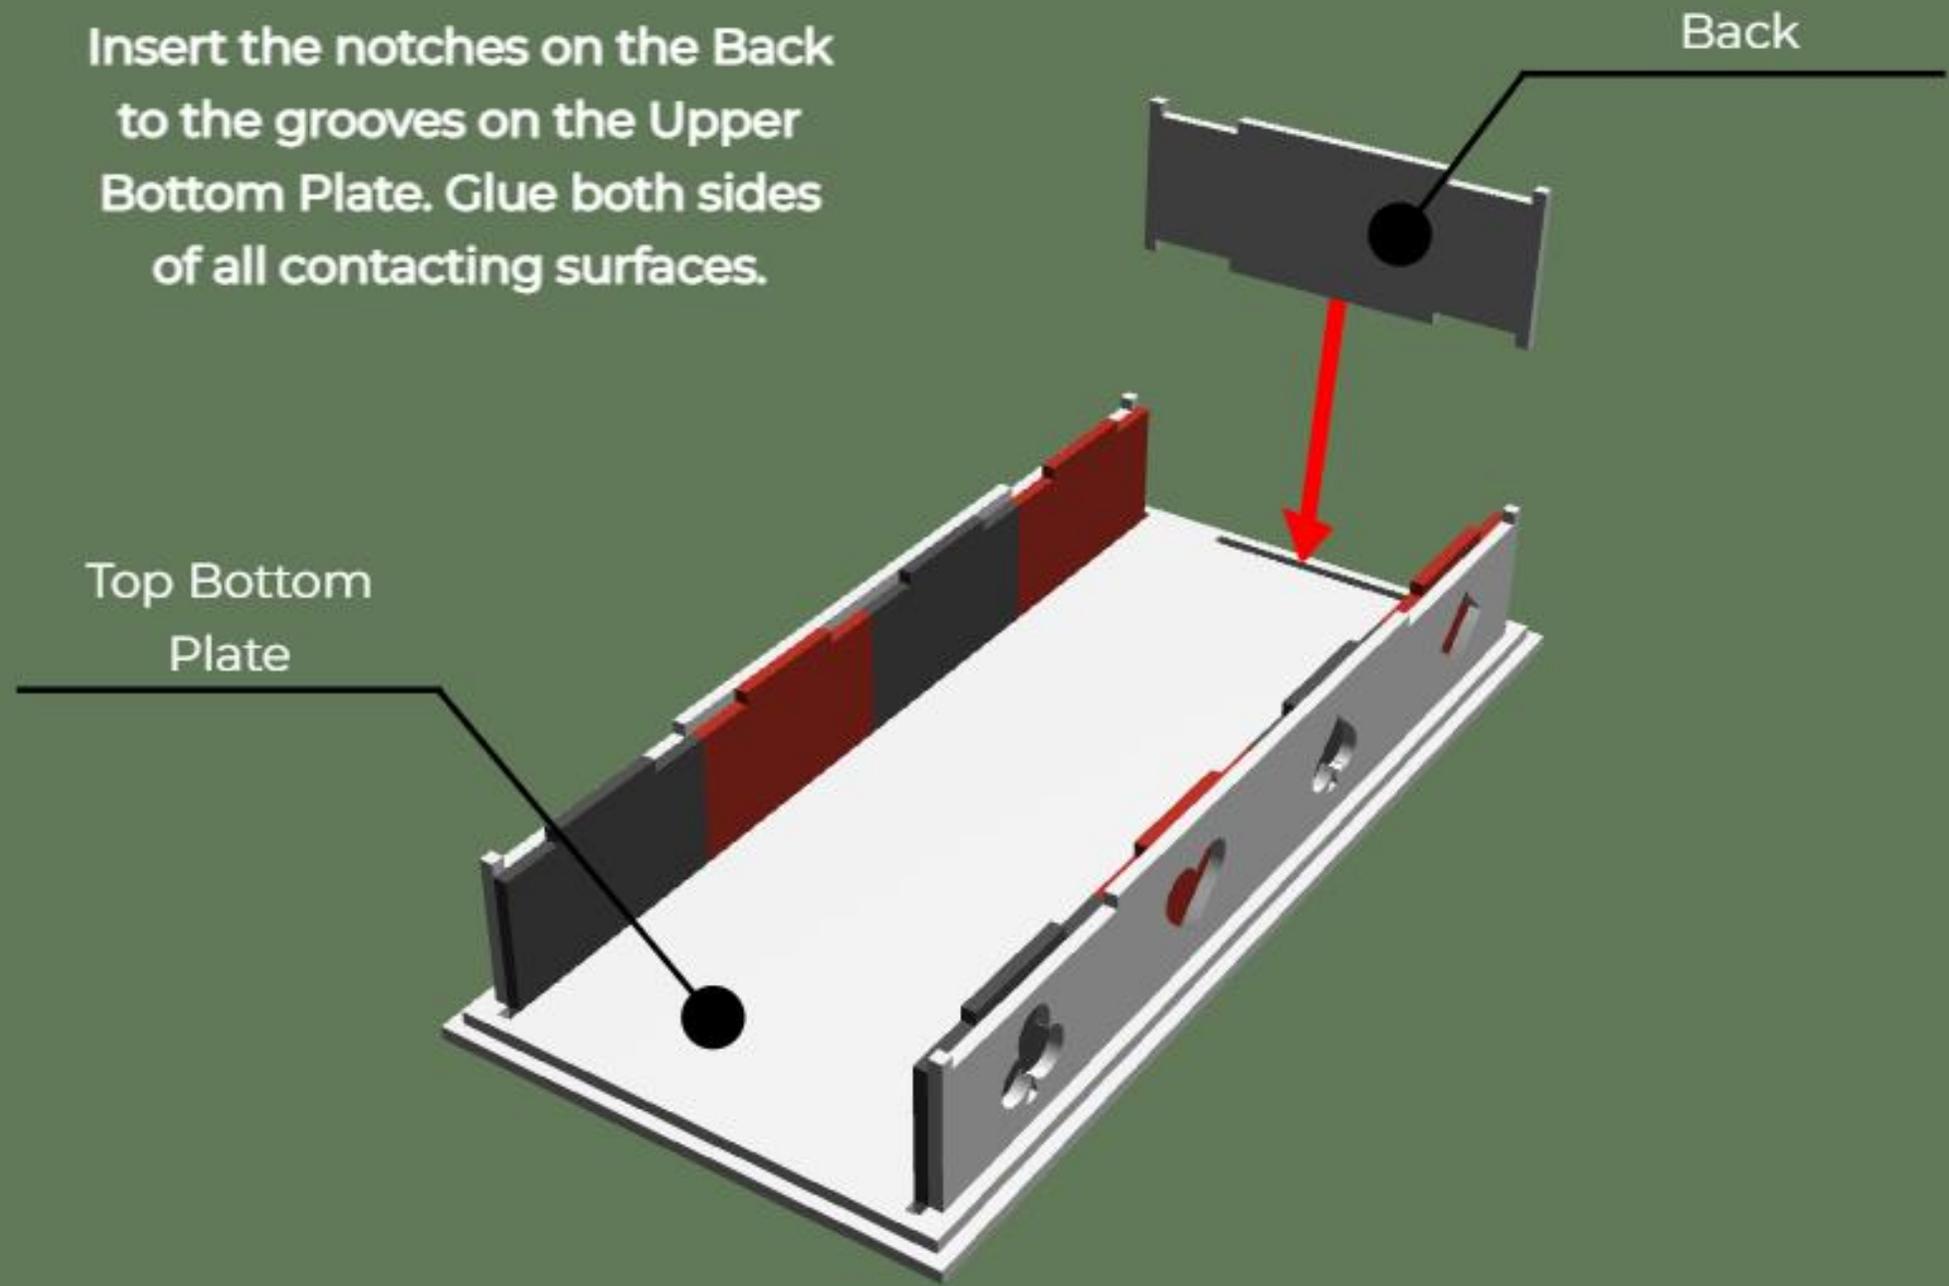


Glue the Top Plate to the Middle Plate making sure that all the holes are aligned properly.


Insert the notches from the sides into the grooves on the Upper Bottom Plate. Be sure to glue both sides of all contacting surfaces.

Glue the Top Plate/Middle Plate assembly onto the Upper Bottom Plate being sure to align everything on center. The Middle Plate should extend beyond the Top Plate and the Upper Bottom Plate.

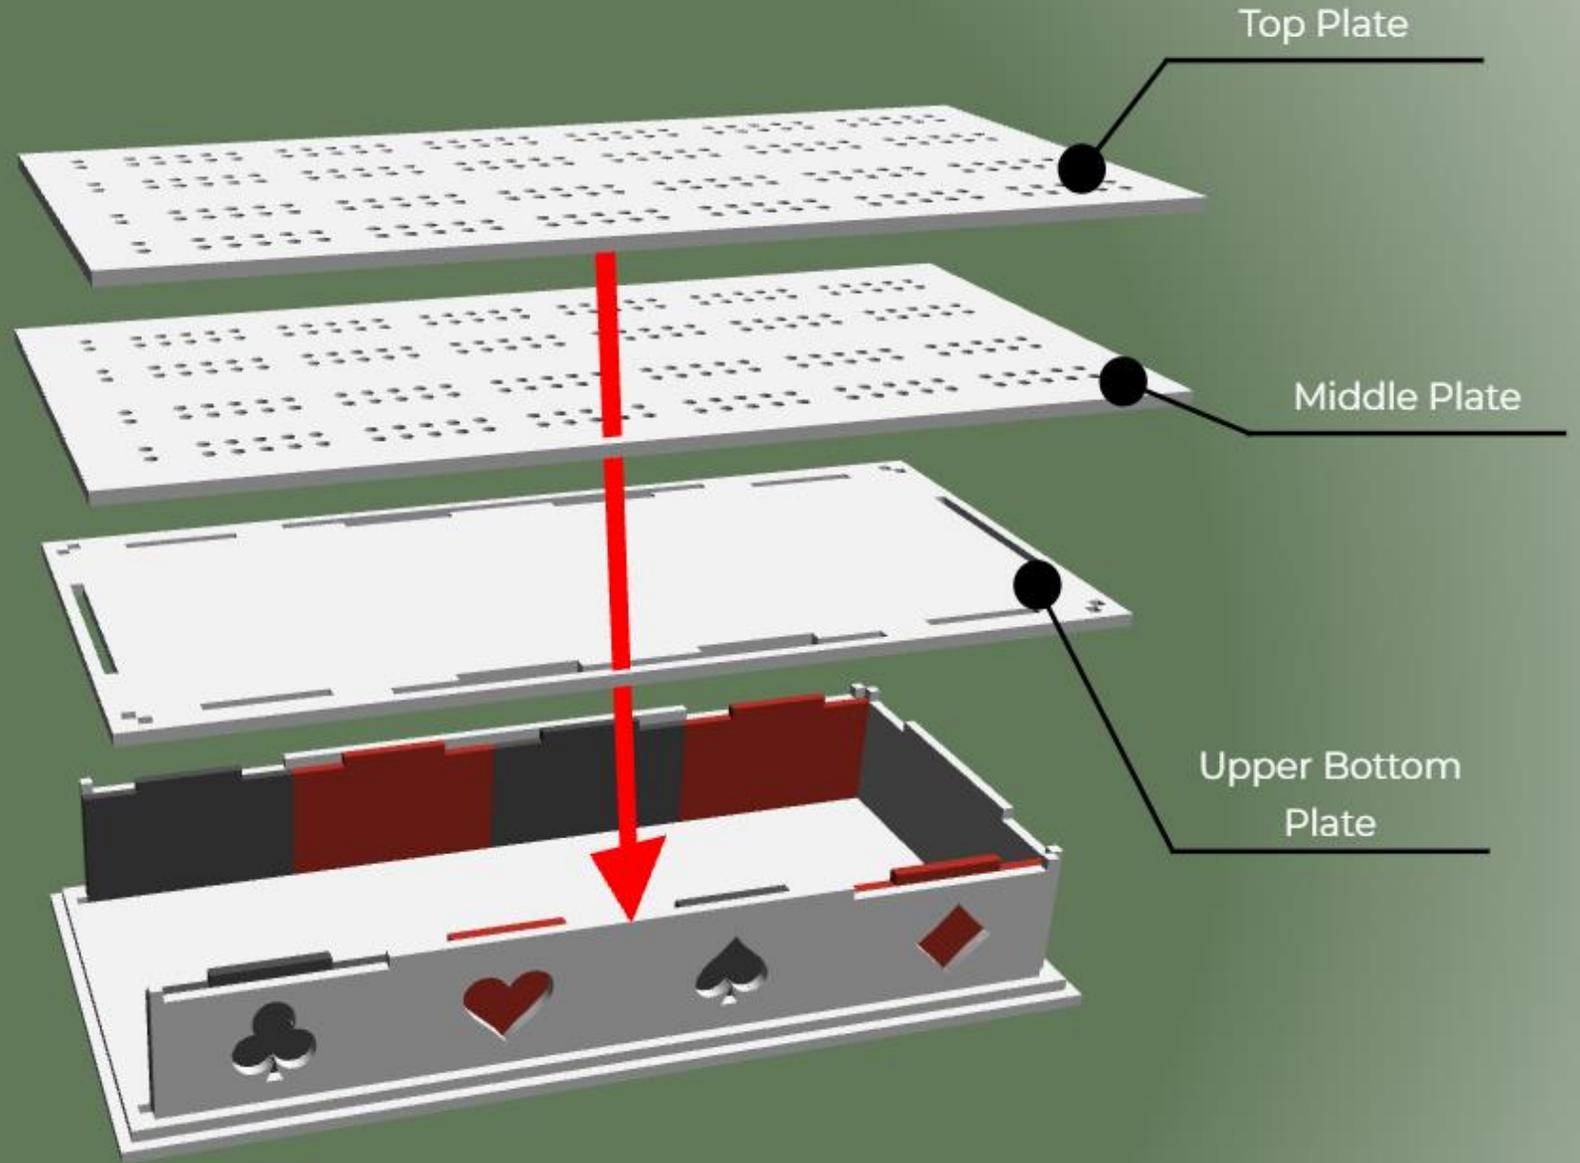

Now for the
Drawer!

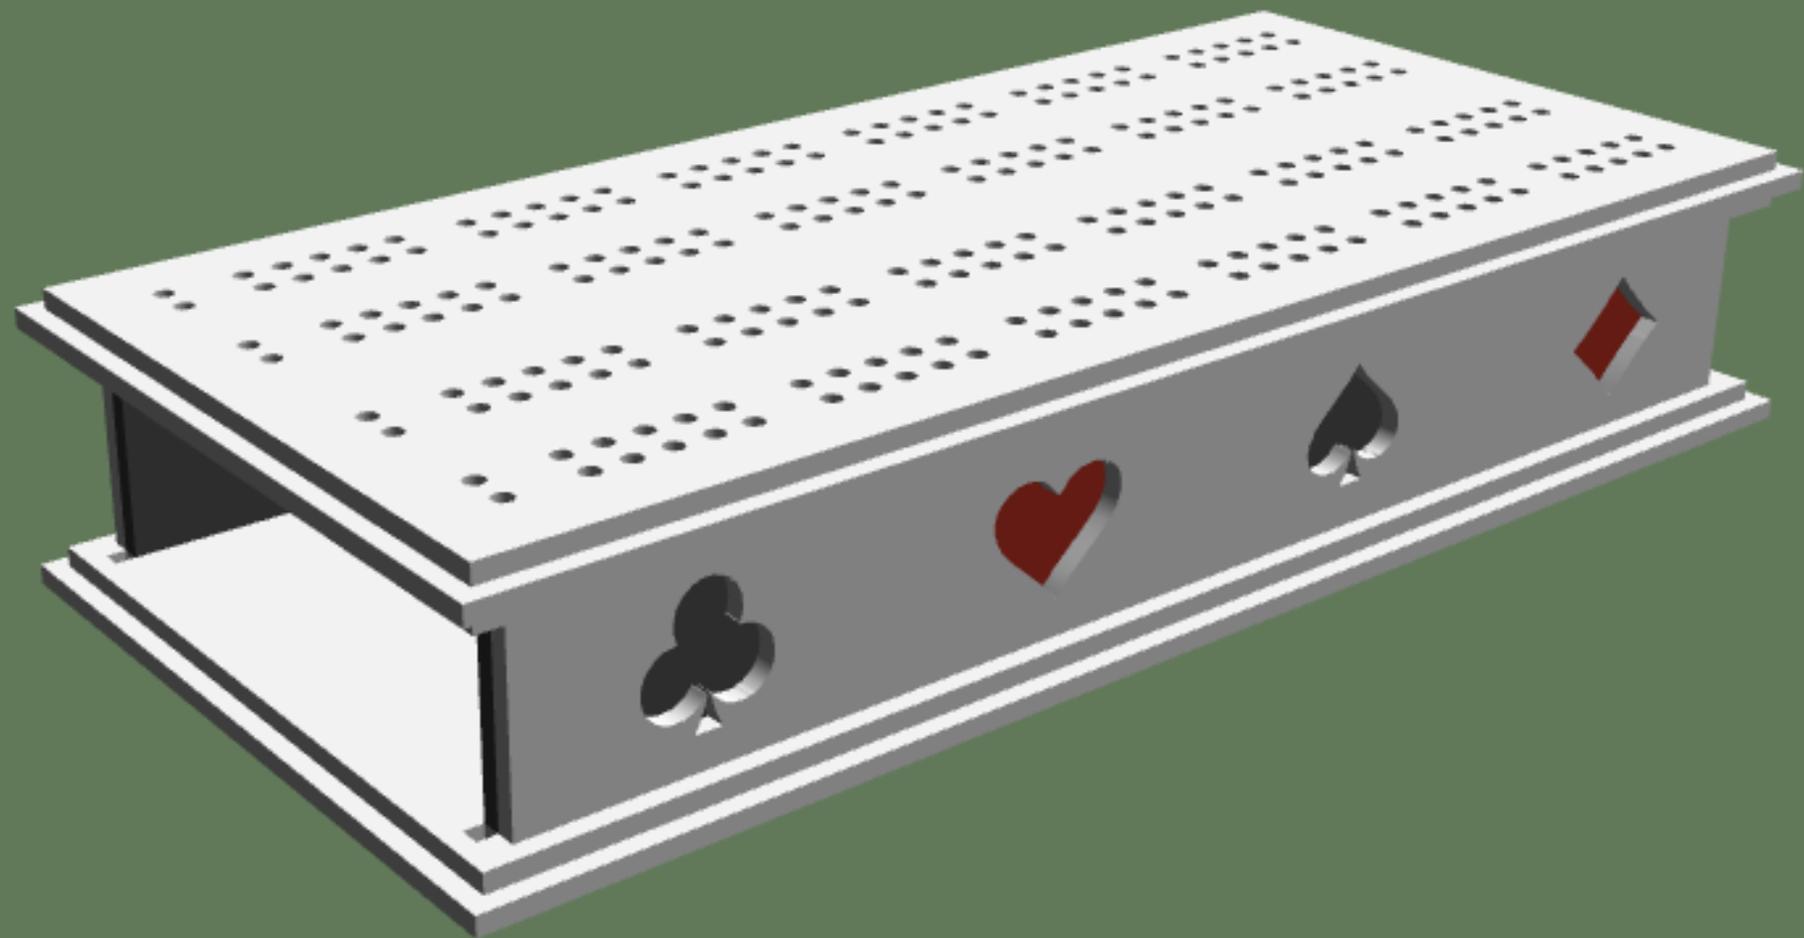

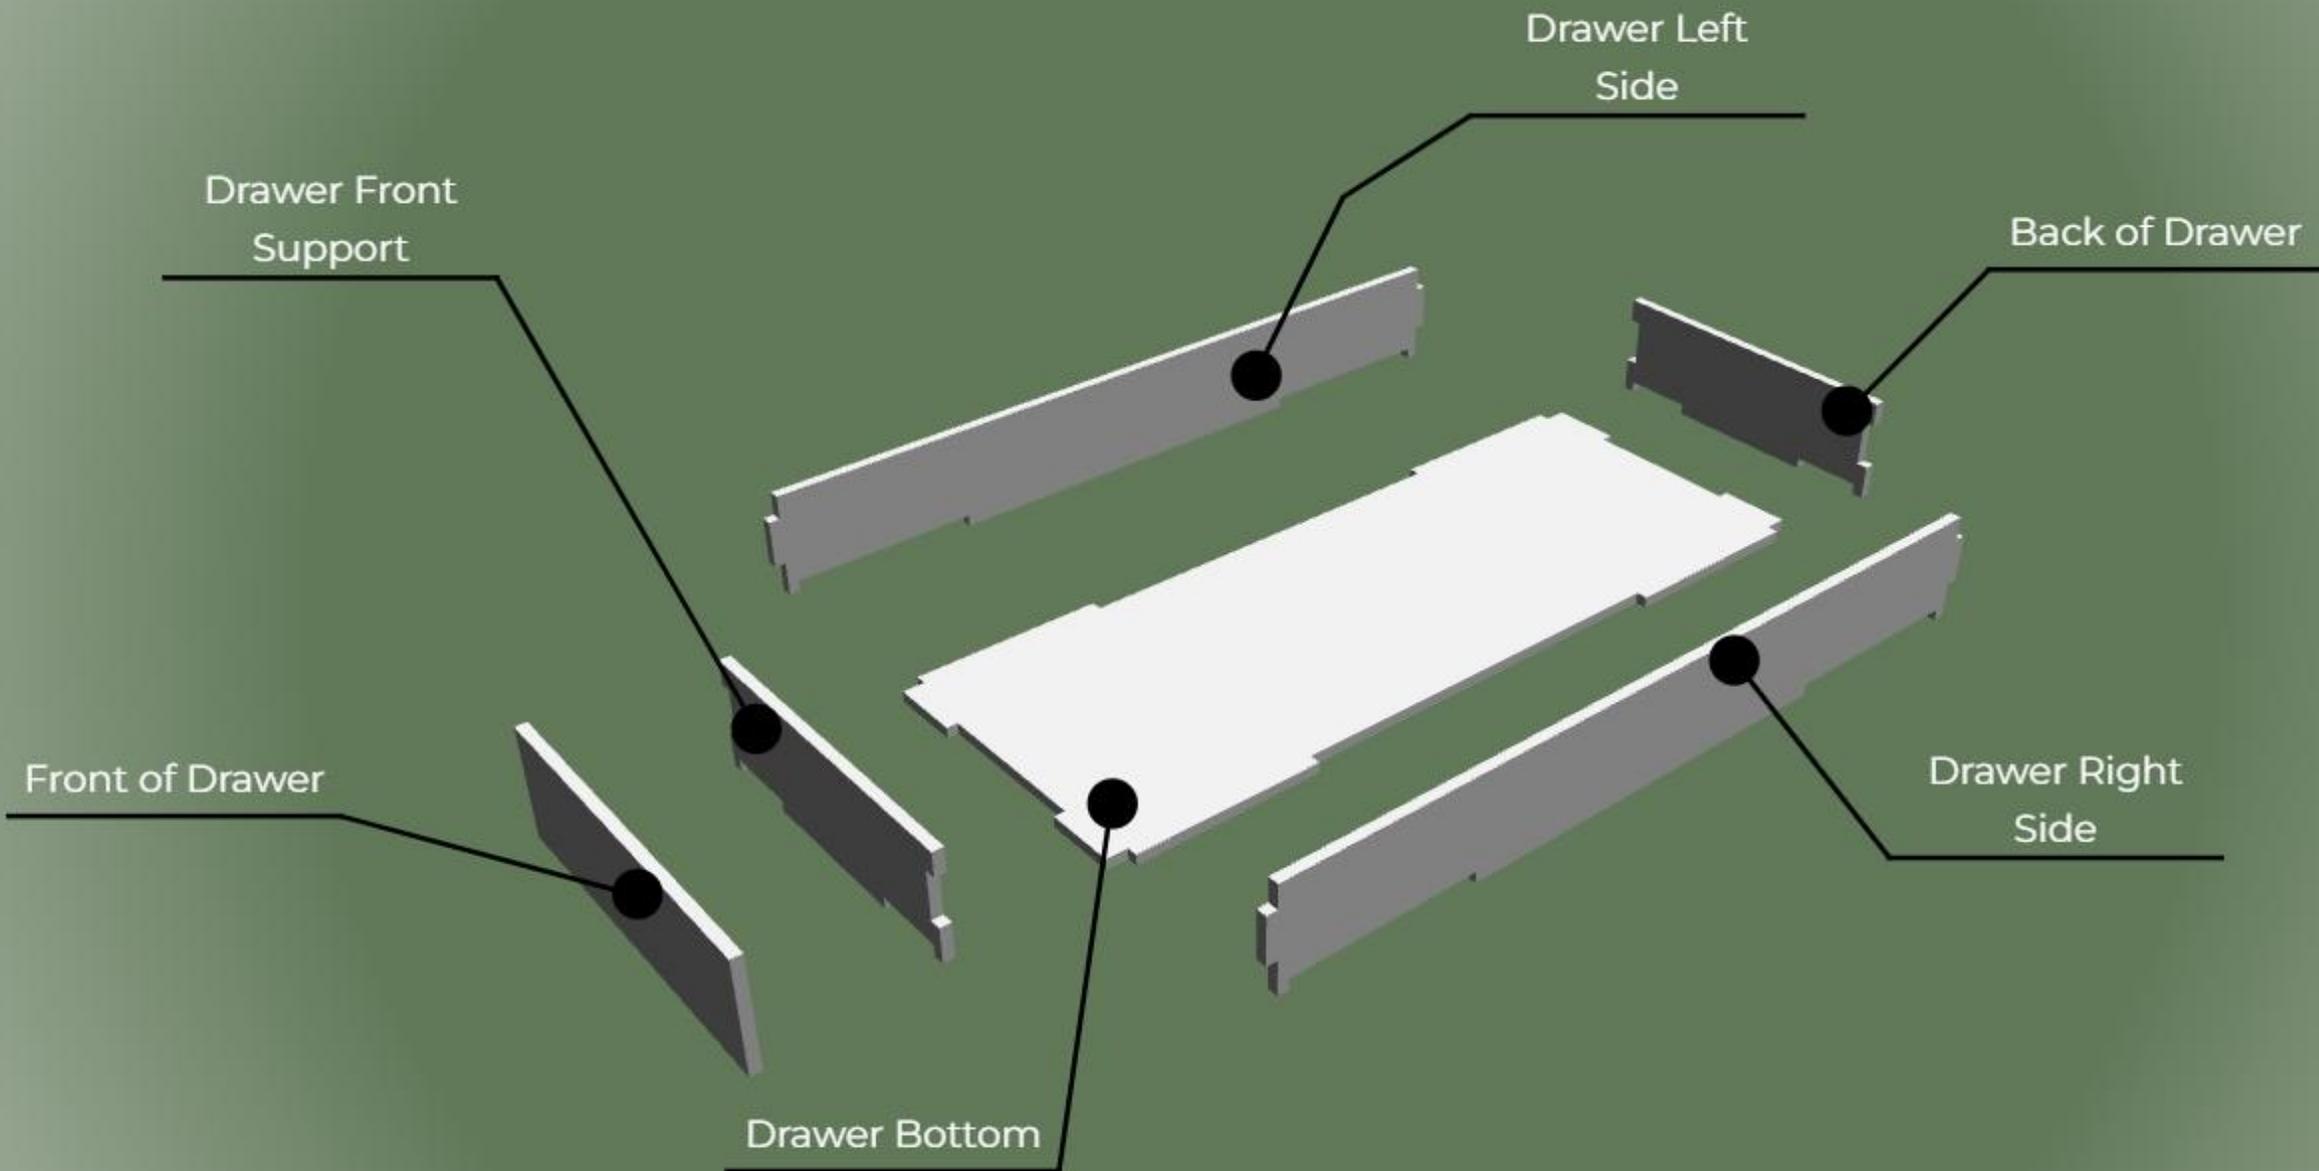


Glue the Left Side and Right Side of the Drawers to the Drawer Bottom. Be sure that the notches on the bottom are inserted into the grooves on the side and glue both sides of all contacting faces.


Drawer Left Side

Drawer Bottom


Drawer Right Side

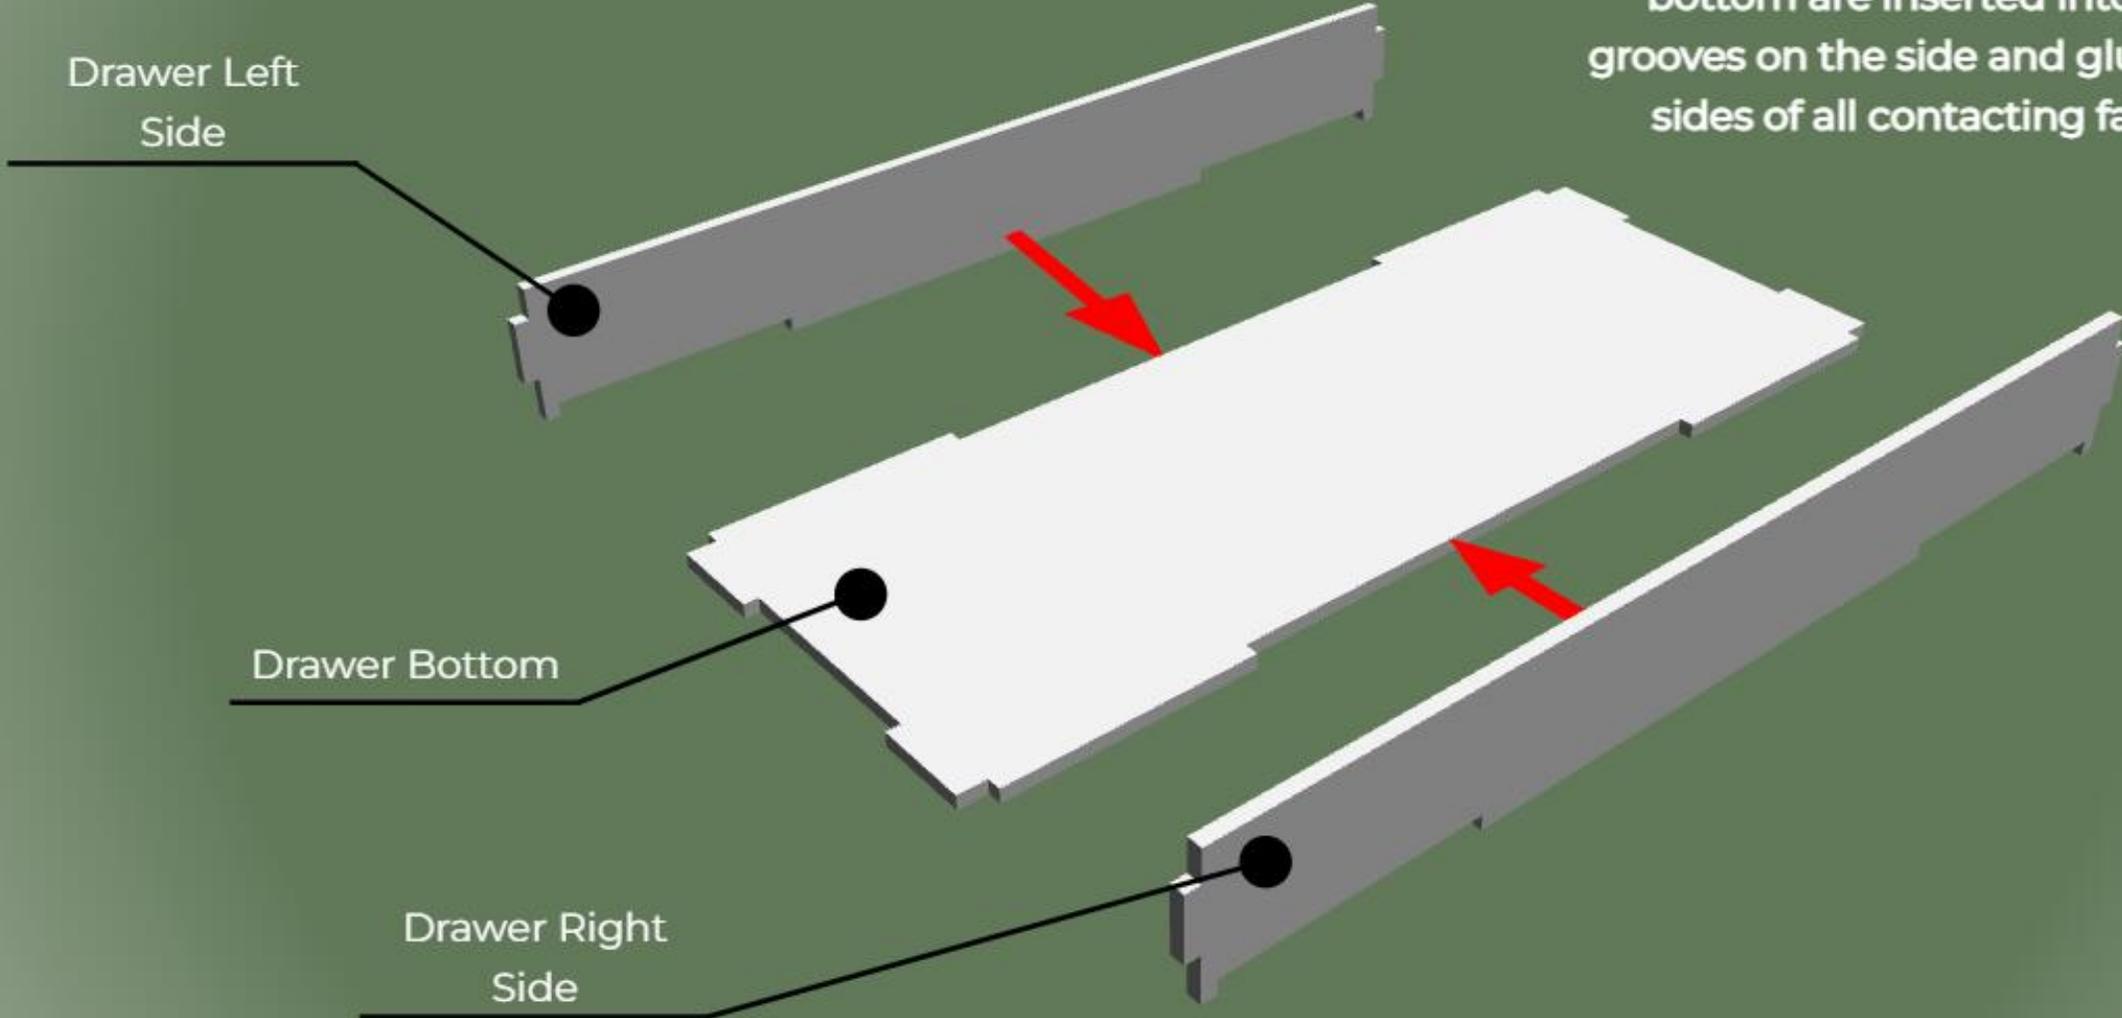


Glue the Drawer Front Support and the Back of Drawer to the Drawer Bottom. Insert the notches on the Front and Back into the grooves on the Bottom and be sure to glue both sides of all contacting faces.

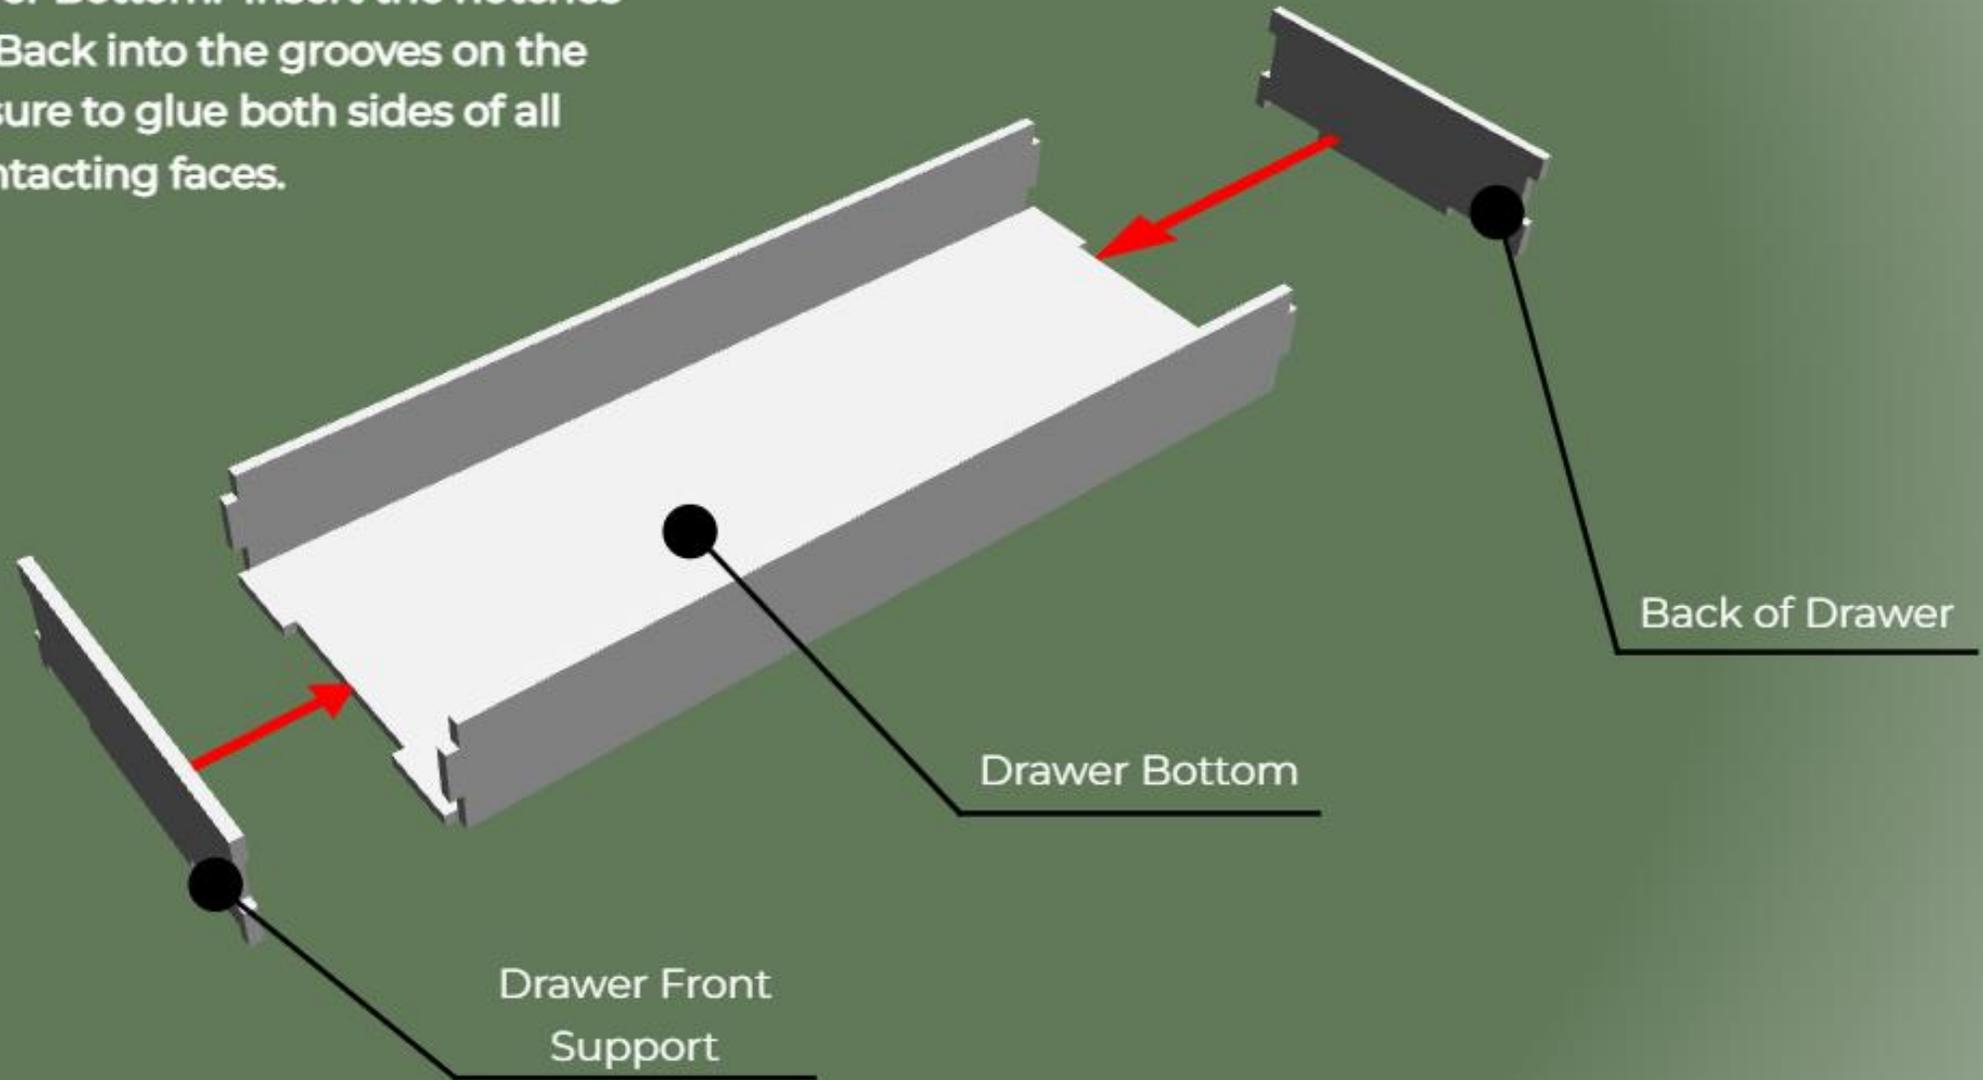

Glue the Front of Drawer to the Drawer Front Support. The bottom should be flush with the bottom of the drawer but centered on the otherwise.

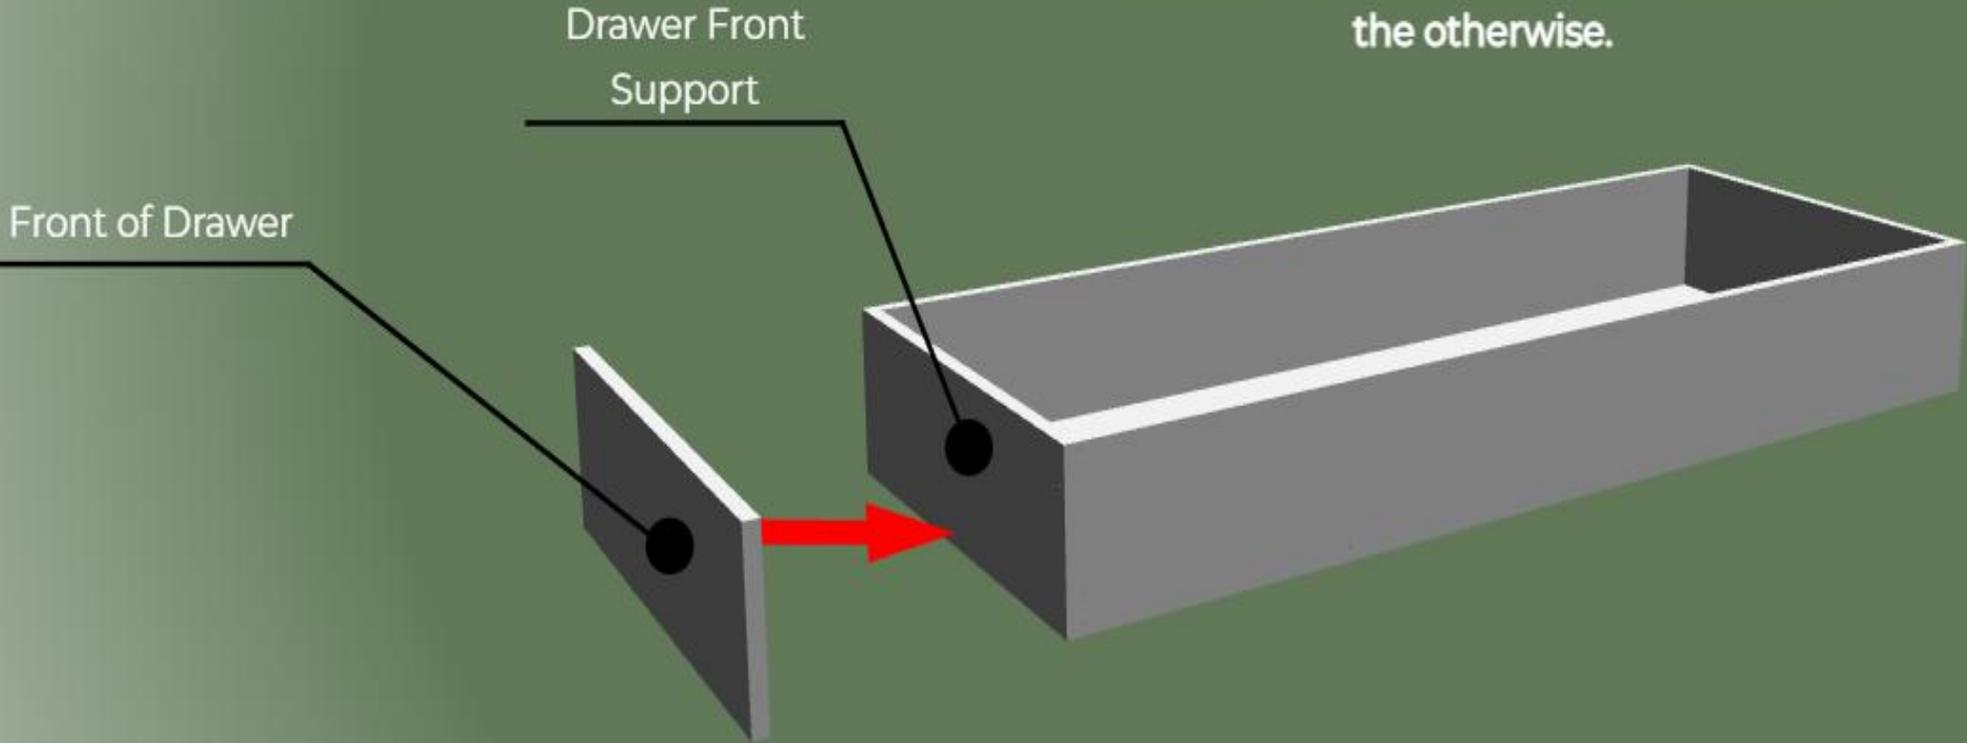

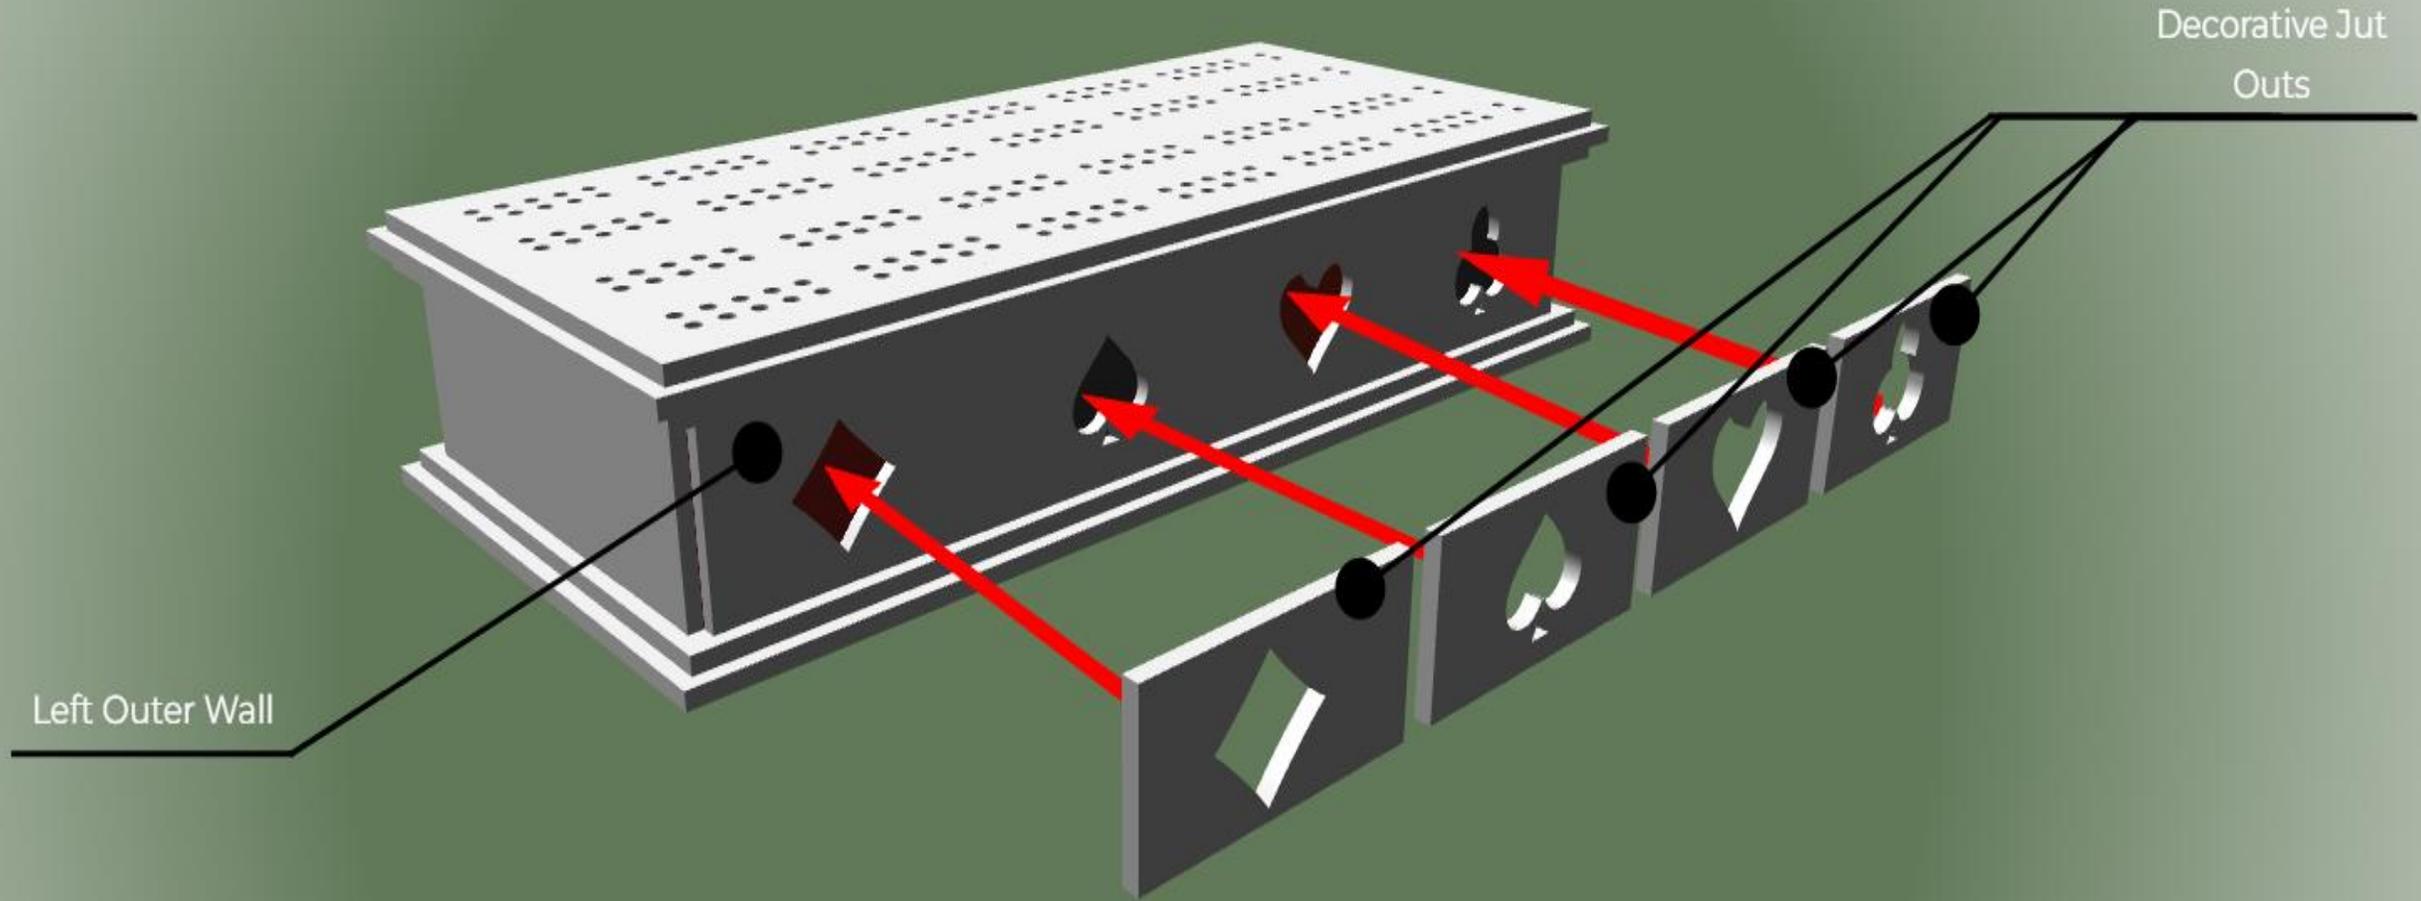

If you opt to use the Decorative Jut Outs (you don't have to), align them before gluing! Despite my best efforts, the shapes are not centered perfectly on the jut outs, so it is possible to glue them on upside down. Lay everything out first, make sure you like the spacing, and then glue.